














 















 



 



 









 

 

 





 














Original		Rechange		Original		Rechange	
	Power		Power		Vol -		Vol -
	TV		TV/R		Mute		Mute
	Source		AV		TTX		Text
	1		1		Audio I/II		Dual
	2		2		P +		Ch +
	3		3		P -		Ch -
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK / Play/Pause		Ok
	7		7		OK / Play/Pause		Play
	8		8		OK / Play/Pause		Pause
	9		9		Right		Right
	0		0		Down		Down
	Sleep / Zoom		Sleep		Display		Info
	Sleep / Zoom		Eject		Menu		Menu
	Last / Slideshow		Back		Red / FAV 1		Red
	Vol +		Vol +		Green / FAV 2		Green





Original	Rechange	Original	Rechange
 Yellow / FAV 3	 Yellow		
 Green / FAV 4	 Blue		
 Settings	 Options		
 Repeat	 Shift + Text		
 Stop / Wide	 Stop		
 Stop / Wide	 Format		
 I<< / Twin	 I<<		
 << / Swap	 <<		
 << / Swap	 Pre Ch		
 >>	 >>		
 >>I / Hold	 >>I		

