










 







 

 

 



 







 



 



 



 

 





 



 



 


 
 




Original	Rechange	Original	Rechange
 Power MD	 Power	 Right	 Right
 TV	 TV/R	 Left	 Left
 CD	 Yellow	 Enter	 Ok
 DVD	 Blue	 Menu	 D. Menu
 Tuner/Band	 Green	 Display	 Info
 Tape	 Red	 Top Menu/Disc/Deck	 Menu
 VCR	 Smart	 1 MD	 1
 MD	 Media	 2 MD	 2
 Vol+	 Vol +	 3 MD	 3
 Vol-	 Vol -	 4 MD	 4
 Muting	 Mute	 5 MD	 5
 Stop MD	 Stop	 6 MD	 6
 Play MD	 Play	 7 MD	 7
 <</>> MD	 <<	 8 MD	 8
 >>/>> MD	 >>	 9 MD	 9
 Up	 Up	 0 MD	 0
 Down	 Down	 >10/-/- MD	 Guide














 


 
 
 


 





 











 





 

 

 

 








Original	Recharge	Original	Recharge
Tv/AV	AV	6 Tv	Shift + 6
Stereo	Dual	7 Tv	Shift + 7
Surround	Options	8 Tv	Shift + 8
SFC	Subt	9 Tv	Shift + 9
Test	Back	0 Tv	Shift + 0
Delay	Format	>10/-/- Tv	Shift + Guide
Level	3D		
+	Ch +		
-	Ch -		
Power TV	Shift + Power		
Tv Vol Up	Shift + Vol +		
Tv Vol Down	Shift + Vol -		
1 Tv	Shift + 1		
2 Tv	Shift + 2		
3 Tv	Shift + 3		
4 Tv	Shift + 4		
5 Tv	Shift + 5		

Original	Recharge
6 Tv	Shift + 6
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
>10/-/- Tv	Shift + Guide



 

 








Original	Rechange	Original	Rechange
 Power DVD	 Power	 Right	 Right
 TV	 TV/R	 Left	 Left
 VCR	 Smart	 Enter	 Ok
 Tuner/Band	 Green	 Stereo	 Dual
 Tape	 Red	 Surround	 Options
 MD	 Media	 SFC	 Subt
 CD	 Yellow	 Test	 Back
 DVD	 Blue	 Delay	 Format
 Play DVD	 Play	 Level	 3D
 I<</<< DVD	 <<	 +	 Ch +
 Stop DVD	 Stop	 -	 Ch -
 >>/>>I DVD	 >>	 1 DVD	 1
 Top Menu/Disc/Deck	 Menu	 2 DVD	 2
 Display	 Info	 3 DVD	 3
 Menu	 D. Menu	 4 DVD	 4
 Up	 Up	 5 DVD	 5
 Down	 Down	 6 DVD	 6





Original	Recharge	Original	Recharge
 7 DVD	 7		
 8 DVD	 8		
 9 DVD	 9		
 0 DVD	 0		
 ≥10/--- DVD	 Guide		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Muting	 Mute		





Original	Recharge
 Power CD	 Power
 TV	 TV/R
 VCR	 Smart
 CD	 Yellow
 DVD	 Blue
 Tape	 Red
 MD	 Media
 Tuner/Band	 Green
 Stop CD	 Stop
 I<</<< CD	 <<
 >>/>>I CD	 >>
 Play CD	 Play
 Menu	 D. Menu
 Display	 Info
 Top Menu/Disc/Deck	 Menu
 Up	 Up
 Down	 Down

Original	Recharge
 Right	 Right
 Left	 Left
 Enter	 Ok
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Power Tape	 Shift + Power
 Stop Tape	 Shift + Stop
 Play Tape	 Shift + Play






 





 





 









 













 





















 








Original	Recharge
 <</><< Tape	 +  Shift + <<
 >>/>> Tape	 +  Shift + >>
 TOP MENU  DISC/DECK 1/2	 +  Shift +  TOP MENU  MENU
 1 CD-Tape	 1
 2 CD-Tape	 2
 3 CD-Tape	 3
 4 CD-Tape	 4
 5 CD-Tape	 5
 6 CD-Tape	 6
 7 CD-Tape	 7
 8 CD-Tape	 8
 9 CD-Tape	 9
 0 CD-Tape	 0
 ≥10/!- CD-Tape	 GUIDE Guide
 Direct Tuning/Disc Enter	 REPEAT TEXT Text

Original	Recharge





 

 

 




Original		Rechange		Original		Rechange	
	Power VCR		Power		6 VCR		6
	VCR		Smart		7 VCR		7
	Tape		Red		8 VCR		8
	TV		TV/R		9 VCR		9
	CD		Yellow		0 VCR		0
	DVD		Blue		>10/-/- VCR		Guide
	Tuner/Band		Green		Direct Tuning/Disc Enter		Text
	MD		Media		Vol+		Vol +
	Stop		Stop		Vol-		Vol -
	I<</<<		<<		Muting		Mute
	>>/>>I		>>		Up		Up
	Play		Play		Down		Down
	1 VCR		1		Right		Right
	2 VCR		2		Left		Left
	3 VCR		3		Enter		Ok
	4 VCR		4		Top Menu/Disc/Deck		Menu
	5 VCR		5		Display		Info





Original	Rechange
 Menu	 D. Menu
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Power Tuner/Band	 Shift + Power
 1 Tuner/Band	 Shift + 1
 2 Tuner/Band	 Shift + 2
 3 Tuner/Band	 Shift + 3
 4 Tuner/Band	 Shift + 4
 5 Tuner/Band	 Shift + 5
 6 Tuner/Band	 Shift + 6
 7 Tuner/Band	 Shift + 7

Original	Rechange
 8 Tuner/Band	 Shift + 8
 9 Tuner/Band	 Shift + 9
 0 Tuner/Band	 Shift + 0
 >10/-/-	 Shift + Guide

