






 





 

 

 

 





 








 




 

 



 











 

 

 

 








	Original	Recharge
	Power DVD	 Power
	Direct Tv Rec	 TV/R
	DVD	 Smart
	SD/PC	 Media
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	*/Cancel	 Guide
	Input Select	 AV
	CH+	 Ch +

	Original	Recharge
	CH-	 Ch -
	ShowView	 Blue
	Manual Skip	 Subt
	I<< Skip	 I<<
	>>I Skip	 >>I
	<< Slow/Search	 <<
	Slow/Search >>	 >>
	Stop	 Stop
	Pause	 Pause
	Play	 Play
	Direct Navigator/Top	 Menu
	Function	 Options
	Sub Menu	 D. Menu
	Return	 Back
	Up	 Up
	Down	 Down
	Right/II>	 Right





Original	Recharge
<II/Left	Left
Enter	Ok
Prog/Check	Sleep
Display	Info
Status	3D
Time Slip	Format
Timer	Shift + AV
Erase	Exit
Rec Mode	Shift + Rec
Rec	Rec
A/Ext Link	Red
B	Green
C/Create Chapter	Yellow
Audio	Dual
Power Tv	Shift + Power
AV Tv	Eject
CH+ Tv	Shift + Ch +

Original	Recharge
CH- Tv	Shift + Ch -
Volume+ Tv	Vol +
Volume- Tv	Vol -

