



Original	Recharge
Standby / On	Power
Input Select	AV / Input / RDS
HDMI	Shift + 0
Eject	Eject / Surround
1	1
2	2
3	3
Prog +	CH+ / Page+
4	4
5	5
6	6
Prog -	CH- / Page-
7	7
8	8
9	9
Time Shift	Zoom / Size
Sat Link	TV/Radio /

Original	Recharge
0	0
Clear	Exit / Cancel / Clear
[i+]	Info / Angle
Text	Text / Goto
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Guide	Guide / EPG / -/-
Top Menu	D.Menu / Top
Up	Up
Menu / List	Menu / Home
Left	Left
Enter / OK	OK
Right	Right
Display	Display / Media
Down	Down
Return / Back	Back / Return
Red	Red / Netflix / Search





Original	Recharge
Green	Green / APP / Repeat
Yellow / System	Yellow / YouTube / Repeat
Blue / Search	Shift + Blue / Prime Video / Prime
Blue / Search	Blue / Prime Video / Random
<< REV	<< / Tune-
Play	Play / Slow
>> FWD	>> / Tune+
I<< Skip	I<< / Preset-
Stop	Stop / Hold
Skip >>I	>>I / Preset+
Pause	Pause / Step / Freeze
VCR	Shift + 4
DVD	Shift + 2
CM Skip	Sound / Title
Dubbing	Picture / Format
Rec	Rec / Rec Mode
Rec Speed	Shift + Rec / Rec Mode

Original	Recharge
Setup	Setup / OPT /
Timer Set	Sleep / Timer
Timer Prog	Shift + Sleep / Timer
1.3x / 0.8x Play	Smart / List

