



Original	Recharge
Standby / On	Power
BD	Shift + 5
DVD	Shift + 2
DVR / BDR	Shift + 7
HDMI	Shift + 0
TV	Shift + 1
CD	Shift + 3
NET	Shift + 9
ADPT	Shift + Guide / EPG / -/-
iPod / USB	Shift + 8
SAT / CBL	Shift + Fav / Marker / PC
MHL	Shift + 4
TUNER	Shift + 6
Input Select ↻	CH- / Page-
Input Select ↻	CH+ / Page+
i / Status	Info / Angle
Volume+	Vol+

Original	Recharge
Volume-	Vol-
Mute	Mute / Dimmer
Audio	Audio / Lang I/II
Up	Up
Video	Picture / Format
Tools Menu	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Home Menu	Menu / Home
iPod Ctrl.	D.Menu / Top
Down	Down
Return	Back / Return
Features PHASE	Red / Netflix / Search
Features ECO	Yellow / YouTube / Repeat
MPX	Shift + Pause / Step / Freeze
Pause	Pause / Step / Freeze





	Original	Rechange		Original	Rechange
	BAND	 +  Shift + Play /		3	 3
	Play	 Play / Slow		+ Favorite	 Fav / Marker / PC
	PTY	 +  Shift + Stop /		Audio / THX	 Sound / Title
	Stop	 Stop / Hold		4	 4
	Preset -	 +  Shift + I<< / Preset-		Signal Sel.	 TV/Radio /
	I<<	 I<< / Preset-		MCACC	 Zoom / Size
	Preset+	 +  Shift + >>I / Preset+		5	 5
	>>I	 >>I / Preset+		6	 6
	Tune-	 +  Shift + << /		CH. Level	 Text / Goto
	<<	 << / Tune-		Disp / Auto	 Display / Media
	Tune+	 +  Shift + >> /		7	 7
	>>	 >> / Tune+		Speakers	 +  Shift + Audio / Lang I/II
	Auto / ALC /	 Subtitle / EQ		Dimmer	 +  Shift + Mute / Dimmer
	1	 1		8	 8
	Standard	 Smart / List		9	 9
	2	 2		Sleep	 Sleep / Timer
	Adv. Surr.	 Eject / Surround		Repeat	 Green / APP / Repeat





Original	Recharge	Original	Recharge
 HDMI Out	 AV / Input / RDS		
 0	 0		
 Class	 Exit / Cancel / Clear		
 Shuffle	 Blue / Prime Video / Random		






Original	Recharge
 Standby / On	 Power
 BD	 Shift + 5
 DVD	 Shift + 2
 BDR / BDR	 Shift + 7
 HDMI	 Shift + 0
 TV	 Shift + 1
 CD	 Shift + 3
 NET	 Shift + 9
 ADPT	 Shift + Guide / EPG / -/-
 iPod / USB	 Shift + 8
 SAT / CBL	 Shift + Fav / Marker / PC
 MHL	 Shift + 4
 TUNER	 Shift + 6
 Input Select ↻	 CH- / Page-
 Input Select ↻	 CH+ / Page+
 i / Status	 Info / Angle
 Volume+	 Vol+

Original	Recharge
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Up	 Up
 Video	 Picture / Format
 Tools Menu	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Home Menu	 Menu / Home
 iPod Ctrl.	 D.Menu / Top
 Down	 Down
 Return	 Back / Return
 Features PHASE	 Red / Netflix / Search
 Features ECO	 Yellow / YouTube / Repeat
 MPX	 Shift + Pause / Step / Freeze
 Pause	 Pause / Step / Freeze

 

 






	Original	Rechange		Original	Rechange
	BAND	 +  Shift + Play /		3	 3
	Play	 Play / Slow		+ Favorite	 Fav / Marker / PC
	PTY	 +  Shift + Stop /		Audio / THX	 Sound / Title
	Stop	 Stop / Hold		4	 4
	Preset -	 +  Shift + I<< / Preset-		Signal Sel.	 TV/Radio /
	I<<	 I<< / Preset-		MCACC	 Zoom / Size
	Preset+	 +  Shift + >>I / Preset+		5	 5
	>>I	 >>I / Preset+		6	 6
	Tune-	 +  Shift + << /		CH. Level	 Text / Goto
	<<	 << / Tune-		Disp / Auto	 Display / Media
	Tune+	 +  Shift + >> /		7	 7
	>>	 >> / Tune+		Speakers	 +  Shift + Audio / Lang I/II
	Auto / ALC /	 Subtitle / EQ		Dimmer	 +  Shift + Mute / Dimmer
	1	 1		8	 8
	Standard	 Smart / List		9	 9
	2	 2		Sleep	 Sleep / Timer
	Adv. Surr.	 Eject / Surround		Repeat	 Green / APP / Repeat





	Original	Rechange	Original	Rechange
	HDMI Out	 AV / Input / RDS		
	0	 0		
	Class	 Exit / Cancel / Clear		
	Shuffle	 Blue / Prime Video / Random		

