



Original	Rechange	Original	Rechange
 Power	 Power	 Sleep	 Sleep
 Mute	 Mute	 Display	 Info
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 Ok
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Aspect	 Format
 9	 9	 Source	 AV
 0	 0	 P.Mode	 Shift + Format
 -/--	 GUIDE	 S.Mode	 Shift + Dual
 Recall	 BACK	 Exit	 Exit
 Vol+	 + VOL	 Menu	 Menu
 Vol-	 VOL -	 Media	 Media
 Nicam	 DUAL	 Play / Pause	 Play





Original		Rechange		Original		Rechange	
	Play / Pause		Pause		Yellow		Yellow
	I<<		I<<		Blue		Blue
	>>I		>>I				
	Rec		Rec				
	Stop / Hold		Stop				
	<< / Index		<<				
	>> / Size		>>				
	Text		Text				
	FAV		Pre Ch				
	FAV-	+	Shift + Down				
	FAV+	+	Shift + Up				
	Reveal		Smart				
	Cancel	+	Shift + Exit				
	Subpage	+	Shift + Subt				
	Subtitle		Subt				
	Red / TV/Radio		Red				
	Green		Green				

