





 


 




 







 






 





 


 











 




Original		Rechange		Original		Rechange	
	Power		Power		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Red		Red
	6		6		Green		Green
	7		7		Yellow		Yellow
	8		8		Blue		Blue
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	List		List		Mute		Mute
	OPT		Options		CH+		Ch +
	Back		Back		CH-		Ch -
	Exit		Exit		Menu		Menu
	EPG		Guide		TXT		Text
	Info		Info		Tv/♪		TV/R





Original		Recharge		Original		Recharge	
* (star)	*	ECO 3D	3D				
APP	APP	APP MEDIA	Media				
DISP	Disp	SHIFT + DISPLAY INFO	Shift + Info				

