 


 
 

 

 






 


 

 
 
 

 
 

 

 
 

 
 





 

 
 

 
 




 



 



 


 





	Original	Rechange	Original	Rechange
	Power		Power	Power
	Mute		Mute	Mute
	[i+]/[?]		Info	Info
	A/B/[+]		TV/R	TV/R
	Input/[+]		AV	AV
	[ ]		Smart	Smart
	1		1	1
	2		2	2
	3		3	3
	4		4	4
	5		5	5
	6		6	6
	7		7	7
	8		8	8
	9		9	9
	0		0	0
	-/--		Guide	Guide
	Recall		Back	Back
	Timer/[≡i]		List	List
	Timer/[X]		Sleep	Sleep
	Vol+		Vol +	Vol +
	Vol-		Vol -	Vol -
	Prog+		Ch +	Ch +
	Prog-		Ch -	Ch -
	(↔)		Dual	Dual
	Menu		Menu	Menu
	Up		Up	Up
	Left		Left	Left
	OK		Ok	Ok
	Right		Right	Right
	Down		Down	Down
	[≡]		Text	Text
	Red/Sound		Red	Red
	Green/*		Green	Green





Original		Recharge	
	Yellow		Yellow
	Blue/[+]		Blue

Original		Recharge	

