


 

 
 
 
 


 



 
 

 
 
 

 
 


 


 





 

 





 

 






	Original	Recharge	Original	Recharge
	Power			Text
	Goto			Dual
	Mute			Media
	Source			3D
	1			Stop
	2			Play
	3			Pause
	4			Format
	5			Options
	6			Up
	7			Down
	8			Right
	9			Left
	0			Ok
	10+			Yellow
	Step			Red
	Subtitle			Green





	Original	Rechange	Original	Rechange
	Blue	D		
	I<<			
	>>I			
	TV/Radio			
	Repeat/Del			
	Pro/EPG			
	Display			
	<</FAV			
	>>/Prot			

