









 

 

 







 

 







 



 

 

 







 

 





 



 

 

 



















Original	Rechange	Original	Rechange
 Power	 Power	 --	 Guide / EPG / -/--
 Up / P+	 Up	 0	 0
 Up / P+	 CH+ / Page+	 P < P	 Fav / Marker / PC
 Menu	 Menu / Home	 PP	 Back / Return
 Left	 Left	 Vol+	 Vol+
 Right	 Right	 I-II	 Audio / Lang I/II
 Down / P-	 Down	 Mute	 Mute / Dimmer
 Down / P-	 CH- / Page-	 Vol-	 Vol-
 1	 1	 Info	 Info / Angle
 2	 2	 Red	 Red / Netflix / Search
 3	 3	 Green	 Green / APP / Repeat
 4	 4	 Yellow	 Yellow / YouTube / Repeat
 5	 5	 Blue	 Blue / Prime Video / Random
 6	 6	 [TV]	 Shift + 1
 7	 7	 [TV]	 TV/Radio /
 8	 8	 [AV]	 AV / Input / RDS
 9	 9	 [ ≡ ]	 Text / Goto













 





 







 
 
 

 



 



 

 



 







 

 





 











Original		Rechange		Original		Rechange
	[≡⊕]		Subtitle / EQ			
	[ /≡]		Picture / Format			
	[≡X]		Exit / Cancel / Clear			
	[≡↓]		Zoom / Size			
	[≡?]		Display / Media			
	[≡i]		Smart / List			





Original	Rechange	Original	Rechange
 Power	 Power	 9	 9
 Up / P+	 Up	 +10	 Guide / EPG / -/-
 Up / P+	 CH+ / Page+	 0	 0
 Menu	 Menu / Home	 Repeat	 Green / APP / Repeat
 Left	 Left	 Search	 Red / Netflix / Search
 Select	 OK	 A→B	 Yellow / YouTube / Repeat
 Right	 Right	 Display	 Display / Media
 Down / P-	 CH- / Page-	 Audio	 Audio / Lang I/II
 Down / P-	 Down	 Subtitle	 Subtitle / EQ
 1	 1	 Zoom	 Zoom / Size
 2	 2	 Prog	 TV/Radio /
 3	 3	 C	 Blue / Prime Video / Random
 4	 4	 Angle	 Info / Angle
 5	 5	 Return	 Back / Return
 6	 6	 Time	 Sleep / Timer
 7	 7	 <<	 << / Tune-
 8	 8	 >>	 >> / Tune+





























 









Original	Recharge	Original	Recharge
	I<< / Preset-		
	>>I / Preset+		
	Play / Slow		
	Pause / Step / Freeze		
	Stop / Hold		
	Sound / Title		
	Eject / Surround		





Original	Recharge	
On/Off		Power
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Tone+		>> / Tune+
Lang		Sound / Title
Menu audio		Audio / Lang / III
Subt.List		Subtitle / EQ
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK

Original	Recharge	
Menu Right		Right
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9





Original	Recharge	
Guide -/-- 1.	GUIDE EPG	Guide / EPG / -/--
0/10	HDMI - SAT 0	0
2.Fav P/C 2.	PC FAV MARKER	Fav / Marker / PC
Red	NETFLIX SEARCH	Red / Netflix / Search
Green	APP REPEAT	Green / APP / Repeat
Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Prime Video RANDOM	Blue / Prime Video / Random
Lang	SHIFT + LANG I/II	Shift + Audio / Lang I/II

Original	Recharge

