

 



 















 

 



 



 



 



 




 

 




















 
 




 
 
 
 




Original		Recharge		Original		Recharge	
	Power		Power		Exit		Exit / Cancel / Clear
	1		1		?		D.Menu / Top
	2		2		@		Smart / List
	3		3		Menu		Menu / Home
	4		4		Up		Up
	5		5		Back		Back / Return
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Tools		Setup / OPT /
	FAV		Fav / Marker / PC		Down		Down
	0		0		Guide		Guide / EPG / -/--
	TXT		Text / Goto		Vol+		Vol+
	Red		Red / Netflix / Search		Source		AV / Input / RDS
	Green		Green / APP / Repeat		P+		CH+ / Page+
	Yellow		Yellow / YouTube / Repeat		Vol-		Vol-
	Blue		Blue / Prime Video / Random		Mute		Mute / Dimmer





Original		Recharge		Original		Recharge	
	P-		CH- / Page-				
	I<		I<< / Preset-				
	>I		>>I / Preset+				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	3D		Picture / Format				
	..0		Zoom / Size				
	[...].		Subtitle / EQ				
	Netflix		Shift + Red / Netflix /				
	My Media		Display / Media				

