




| Original | Recharge |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Recall |  Back / Return |
|  0 |  0 |
|  Info |  Info / Angle |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  Up |  Up |

| Original | Recharge |
|--|---|
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Sat |  Shift + 0 |
|  Down |  Down |
|  FAV |  Fav / Marker / PC |
|  TV / Radio |  TV/Radio / |
|  Guide |  Guide / EPG / -/- |
|  Freeze |  Pause / Step / Freeze |
|  Aux In |  AV / Input / RDS |
|  UHF |  Smart / List |
|  Red / Audio |  Audio / Lang I/II |
|  Red / Audio |  Red / Netflix / Search |
|  Green / Positioner |  Green / APP / Repeat |
|  Yellow / Text |  Yellow / YouTube / Repeat |
|  Yellow / Text |  Text / Goto |
|  Blue / Audio R/L |  Blue / Prime Video / Random |



