








 






 


 


 






 



 


 



 















| Original  |           | Recharge  |            | Original  |              | Recharge  |                 |
|---|-----------|---|------------|---|--------------|---|-----------------|
|    | Power     |    | Power      |    | PIP          |    | Guide           |
|    | AV        |    | AV         |    | TINT         |    | 3D              |
|    | Aux       |   | Shift + AV |    | *            |    | Options         |
|    | Mute      |    | Mute       |    | ⦿            |    | Shift + Options |
|    | 1         |    | 1          |    | i            |    | Subt            |
|    | 2         |    | 2          |    | Fa           |    | Dual            |
|    | 3         |    | 3          |    | Sol          |    | Shift + Dual    |
|    | 4         |    | 4          |    | ←•→          |    | Shift + Smart   |
|    | 5         |    | 5          |    | i            |    | Info            |
|    | 6         |    | 6          |    | Text         |    | Text            |
|   | 7         |   | 7          |   | TV           |   | TV/R            |
|  | 8         |  | 8          |  | Up / P+      |  | Up              |
|  | 9         |  | 9          |  | Up / P+      |  | Ch +            |
|  | 0         |  | 0          |  | Down / P-    |  | Down            |
|  | P/C / B-R |  | Pre Ch     |  | Down / P-    |  | Ch -            |
|  | HIFI M+1  |  | Smart      |  | Right / Vol+ |  | Right           |
|  | •\•       |  | Media      |  | Right / Vol+ |  | Vol +           |





| Original   | Recharge  | Original | Recharge |
|--|---|----------|----------|
|  Left / Vol-          |  Left          |          |          |
|  Left / Vol-          |  Vol -         |          |          |
|  OK                   |  Ok            |          |          |
|  Reveal               |  Menu          |          |          |
|  Sleep                |  Sleep         |          |          |
|  Text Cancel          |  Exit          |          |          |
|  +1 Input             |  Shift + Media |          |          |
|  Mix                  |  Shift + Text  |          |          |
|  Red / Text Size      |  Red           |          |          |
|  Green / Exit         |  Green         |          |          |
|  Yellow / Stop / PC- |  Yellow       |          |          |
|  Blue / 0100 / PC+  |  Blue        |          |          |
|  |   |          |          |
|  |   |          |          |
|  |   |          |          |
|  |   |          |          |
|  |   |          |          |
|  |   |          |          |
|  |   |          |          |
|  |   |          |          |
|  |   |          |          |

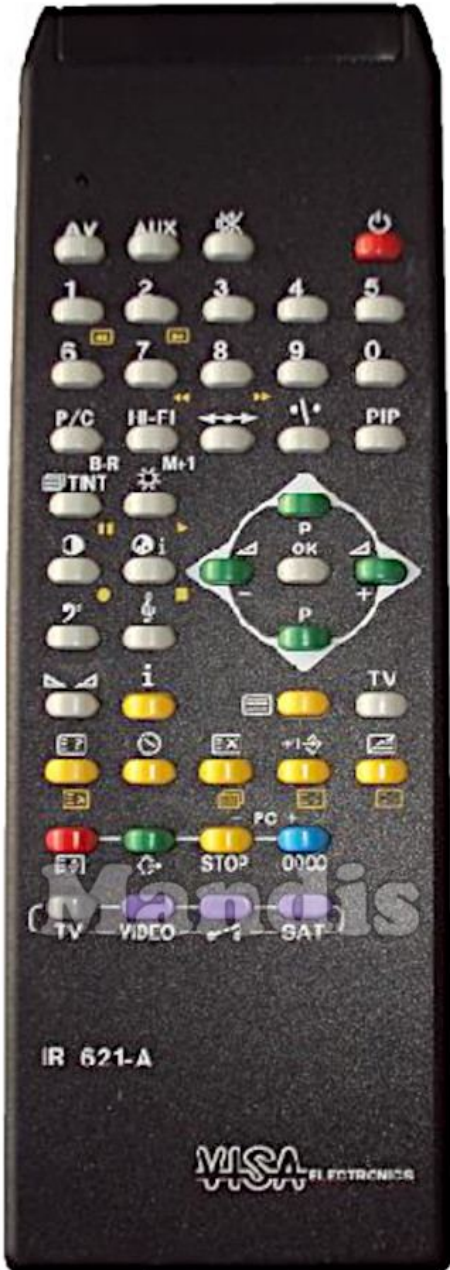