
 




 
 
 
 
 
 

 
 
 
 




 
 
 
 
 


 

 
 
 




 
 
 






 

 


 



Original	Recharge	
On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Stop		Stop
Slow Up		Ch +
Auto/Track		Red
Pause		Pause
Subt.		Subt
Rep/A-B	 + 	Shift + Text
Title		List
Repeat/1/All		Text
Zoom	 + 	Shift + Eject
DVD/TV		Media
Menu		Menu
Menu Up		Up
Display		Info
Return		Back

Original	Recharge	
Menu Left		Left
Next		>>
Progr.		Sleep
Prev.		<<
OK Enter		Ok
Top Menu	 + 	Shift + Menu
Menu Right		Right
Menu Down		Down
Volume+		Vol +
Volume-		Vol -
1		1
2		2
3		3
4		4
Mark	 + 	Shift + Pre Ch
Digest	 + 	Shift + Info
Rewind		<<



Original	Recharge	Original	Recharge
Play	 Play	Np	 +  Shift + Subt
Record	 Rec	Input Source	 AV
F.Forward	 >>	Setup	 Options
R/L	 Green	Audio	 Dual
Pbc	 Yellow	3D	 3D
5	 5		
6	 6		
7	 7		
8	 8		
Video	 Smart		
9	 9		
Syst.Preset	 D. Menu		
+10	 Guide		
Angle	 Format		
0	 0		
C/CH	 Pre Ch		
Open/Close	 Eject		

Original	Recharge	Original	Recharge
Np	 +  Shift + Subt	Input Source	 AV
Setup	 Options	Audio	 Dual
3D	 3D		

