



 




 
 





 




 






 





 

 
 
 
 
 

 







 















 



Original	Recharge
 Power TV	 Power
 1 TV	 1
 2 TV	 2
 3 TV	 3
 4 TV	 4
 5 TV	 5
 6 TV	 6
 7 TV	 7
 8 TV	 8
 9 TV	 9
 0/-- TV	 0
 AV TV	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Return TV	 Back
 PR+ TV	 Ch +

 

 


 
 
 
 
 
 

 

 




 
 




 

 

 
 
 

 
Original	Recharge
 PR- TV	 Ch -
 Play TV	 Play
 << TV	 <<
 >> TV	 >>
 Record TV	 Rec
 Stop TV	 Stop
 Pause TV	 Pause
 Exit TV	 Exit
 Menu TV	 Menu
 Violet/Text TV	 Text
 Red/Presets TV	 Red
 Green/List TV	 Green
 Yellow/Info TV	 Yellow
 Blue/Guide TV	 Blue
 Up TV	 Up
 Down TV	 Down
 Right/Zoom+	 Right



 
TV

 







 


 

 


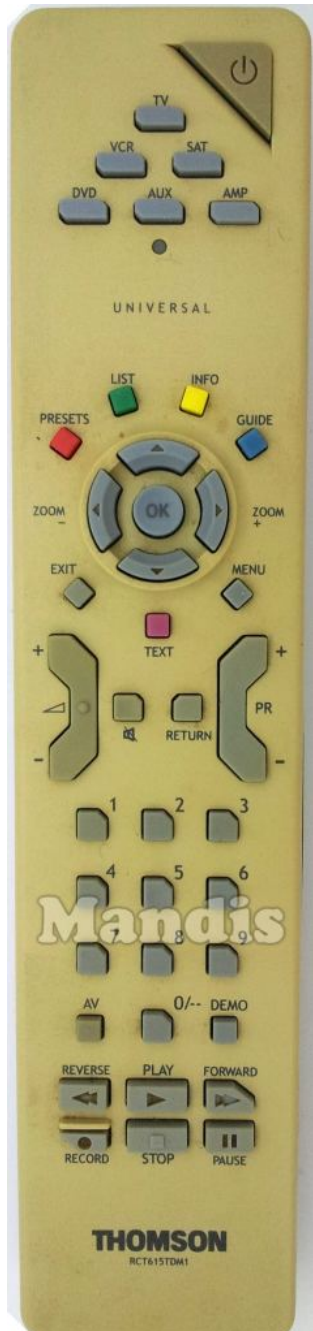 









 



 



 



 



 
 


 
 











 








Original	Recharge
 Left/Zoom- TV	 Left
 OK TV	 Ok
 TV	 TV/R
 Demo TV	 Pre Ch
 VCR	 Smart
 SAT	 Media
 DVD	 Options
 AUX	 Format
 AMP	 3D
 Power AUX	 Shift + Power
 Red/Presets	 Shift + Red
 Green/List AUX	 Shift + Green
 Yellow/Info AUX	 Shift + Yellow
 Blue/Guide AUX	 Shift + Blue
 Up AUX	 Shift + Up
 OK AUX	 Shift + Ok
 Down AUX	 Shift + Down

Original	Recharge
 Right/Zoom+	 Shift + Right
 Left/Zoom- AUX	 Shift + Left
 Exit AUX	 Shift + Exit
 Menu AUX	 Shift + Menu
 Violet/Text AUX	 Shift + Text
 Return AUX	 Shift + Back
 PR+ AUX	 Shift + Ch +
 PR- AUX	 Shift + Ch -
 1 AUX	 Shift + 1
 2 AUX	 Shift + 2
 3 AUX	 Shift + 3
 4 AUX	 Shift + 4
 5 AUX	 Shift + 5
 6 AUX	 Shift + 6
 7 AUX	 Shift + 7
 8 AUX	 Shift + 8
 9 AUX	 Shift + 9





 





 

 



 

 
 
 



 

 

 





 
 
 

 

 

 

 



 



 

 




 
 


 
 

 

 





 
Original	Recharge	Original	Recharge
 Power DVD	 Power	 PR+ DVD	 Ch +
 Red/Presets	 Red	 PR- DVD	 Ch -
 Green/List DVD	 Green	 1 DVD	 1
 Yellow/Info DVD	 Yellow	 2 DVD	 2
 Blue/Guide DVD	 Blue	 3 DVD	 3
 Violet/Text DVD	 Text	 4 DVD	 4
 Up DVD	 Up	 5 DVD	 5
 Down DVD	 Down	 6 DVD	 6
 Right/Zoom+	 Right	 7 DVD	 7
 Left/Zoom- DVD	 Left	 8 DVD	 8
 OK DVD	 Ok	 9 DVD	 9
 Exit DVD	 Exit	 0 DVD	 0
 Menu DVD	 Menu	 AV DVD	 AV
 Vol+	 Vol +	 Demo DVD	 Pre Ch
 Vol-	 Vol -	 Play DVD	 Play
 Mute	 Mute	 << DVD	 <<
 Return DVD	 Back	 >> DVD	 >>





 
Original	Recharge	Original	Recharge
 Record DVD	 Rec	 Up VCR	 Shift + Up
 Stop DVD	 Stop	 Down VCR	 Shift + Down
 Pause	 Pause	 Right/Zoom+	 Shift + Right
 TV	 TV/R	 Left/Zoom- VCR	 Shift + Left
 VCR	 Smart	 OK VCR	 Shift + Ok
 SAT	 Media	 Return VCR	 Shift + Back
 DVD	 Options	 PR+ VCR	 Shift + Ch +
 AUX	 Format	 PR- VCR	 Shift + Ch -
 AMP	 3D	 1 VCR	 Shift + 1
 Power VCR	 Shift + Power	 2 VCR	 Shift + 2
 Red/Presets	 Shift + Red	 3 VCR	 Shift + 3
 Green/List VCR	 Shift + Green	 4 VCR	 Shift + 4
 Yellow/Info VCR	 Shift + Yellow	 5 VCR	 Shift + 5
 Blue/Guide VCR	 Shift + Blue	 6 VCR	 Shift + 6
 Violet/Text VCR	 Shift + Text	 7 VCR	 Shift + 7
 Exit VCR	 Shift + Exit	 8 VCR	 Shift + 8
 Menu VCR	 Shift + Menu	 9 VCR	 Shift + 9






 




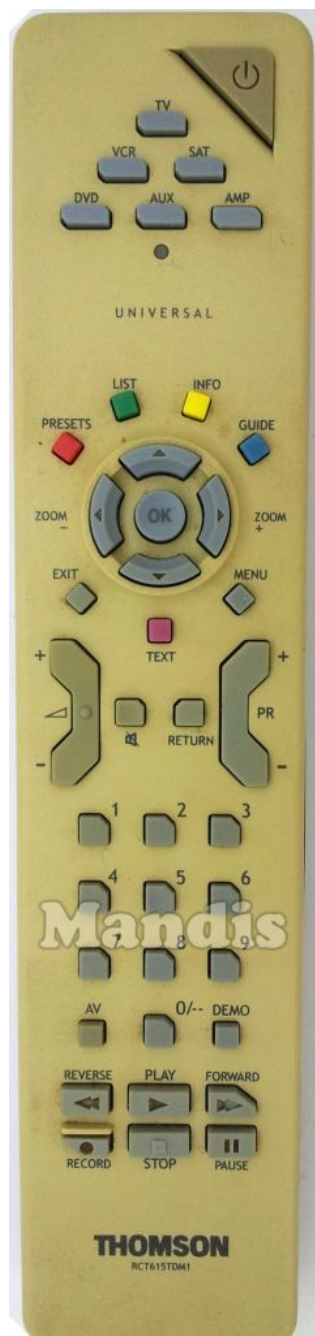









 
 






 
	0 VCR	 + 	Shift + 0
	<< VCR	 + 	Shift + <<
	>> VCR	 + 	Shift + >>
	Play VCR	 + 	Shift + Play
	AV VCR	 + 	Shift + AV
	Stop VCR	 + 	Shift + Stop
	Record VCR	 + 	Shift + Rec
	Pause VCR	 + 	Shift + Pause







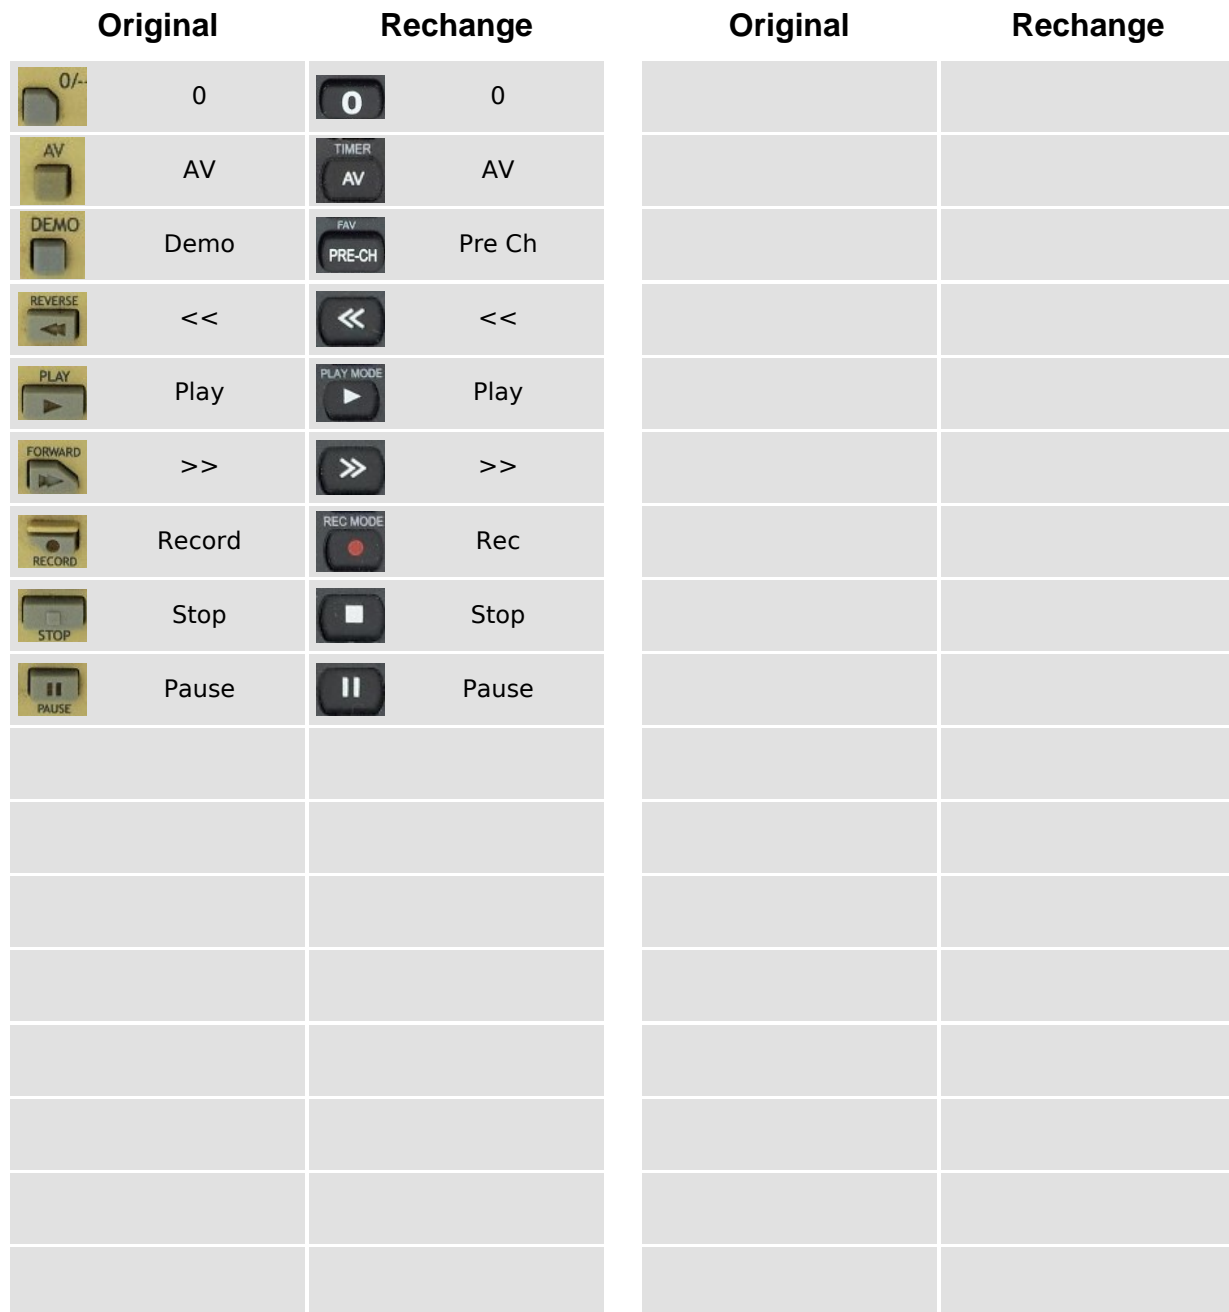


 
 












 



















 
 





 
 
 

 
 
 
 
 

 
 
 
 
 
 

 
 



Original	Recharge	Original	Recharge
	Power		Power
	TV		TV/R
	VCR		Smart
	SAT		Media
	DVD		Options
	AUX		Format
	AMP		3D
	Red/Presets		Red
	Green/List		Green
	Yellow/Info		Yellow
	Blue/Guide		Blue
	Violet/Text		Text
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok
	Exit		Exit
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

 






Original	Recharge	Original	Recharge
	Power		Power
	TV		TV/R
	VCR		Smart
	SAT		Media
	DVD		Options
	AUX		Format
	AMP		3D
	Red/Presets		Red
	Yellow/Info		Yellow
	Blue/Guide		Blue
	Violet/Text		Text
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok
	Exit		Exit
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



[illegible]