


 
 
 








 

 

 
 


 

 
 

 


 


 





 












Original	Rechange
Power	Power
1	1
2	2
Eject/Open-Close	Eject
VCR	Smart
DVD	Media
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Exit
AV/Input	AV
>>	>>

Original	Rechange
<<	<<
>>	>>
<<	<<
Stop	Stop
Play	Play
Pause/Step	Pause
Disc Menu/List	Menu
Home	Shift + Smart
Display	Info
Return	Back
Enter	Ok
Up	Up
PR/CH/TRK+	Ch +
PR/CH/TRK-	Ch -
Down	Down
Right	Right
Left	Left





Original	Recharge
 O))/Audio	 Dual
 [...] / Subtitle	 Subt
 Zoom	 +  Shift + Eject
 I.Skip	 3D
 Rec	 Rec
 TV/VCR	 TV/R
 CHP.ADD	 Text
 Title	 Options
 Rec Mode	 +  Shift + Rec
 Dubbing	 Mute
 Play Mode	 +  Shift + Play
 Marker	 Pre Ch
 Search	 +  Shift + TV/R
 Thumbnail	 List
 Power Tv	 +  Shift + Power
 AV/Input Tv	 +  Shift + AV
 Vol+ Tv	 Vol +

Original	Recharge
 Vol- Tv	 Vol -
 PR/CH+ Tv	 +  Shift + Ch +
 PR/CH- Tv	 +  Shift + Ch -

