


















 



 



 


 













Original		Rechange		Original		Rechange	
	Power MD		Power		Up		Up
	Direct Tuning		Text		Down		Down
	Dimmer		Pre Ch		Right		Right
	TV		TV/R		Left		Left
	CD		Yellow		Enter		Ok
	DVD		Blue		Menu		D. Menu
	Tuner/Band		Green		Display		Info
	Tape		Red		Top Menu/Disc/Deck		Menu
	VCR		Smart		1 MD		1
	MD		Media		2 MD		2
	Vol+		Vol +		3 MD		3
	Vol-		Vol -		4 MD		4
	Muting		Mute		5 MD		5
	Stop MD		Stop		6 MD		6
	Play MD		Play		7 MD		7
	<</I<< MD		<<		8 MD		8
	>>/>>I MD		>>		9 MD		9













 



 

 
 
 

 

 



 

 

 








 

 


 



 

 

 





 



 






Original	Rechange
0 MD	0
>10/-/-- MD	Guide
Tv/AV	AV
Stereo	Dual
Surround	Options
SFC	Subt
Test	Back
Delay	Format
Level	3D
+	Ch +
-	Ch -
Power TV	Shift + Power
Tv Vol Up	Shift + Vol +
Tv Vol Down	Shift + Vol -
1 Tv	Shift + 1
2 Tv	Shift + 2
3 Tv	Shift + 3

Original	Rechange
4 Tv	Shift + 4
5 Tv	Shift + 5
6 Tv	Shift + 6
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
>10/-/-- Tv	Shift + Guide





Original	Recharge	Original	Recharge
 Power DVD	 Power	 Right	 Right
 TV	 TV/R	 Left	 Left
 VCR	 Smart	 Enter	 Ok
 Tuner/Band	 Green	 Stereo	 Dual
 Tape	 Red	 Surround	 Options
 MD	 Media	 SFC	 Subt
 CD	 Yellow	 Test	 Back
 DVD	 Blue	 Delay	 Format
 Play DVD	 Play	 Level	 3D
 I<</<< DVD	 <<	 +	 Ch +
 Stop DVD	 Stop	 -	 Ch -
 >>/>>I DVD	 >>	 1 DVD	 1
 Top Menu/Disc/Deck	 Menu	 2 DVD	 2
 Display	 Info	 3 DVD	 3
 Menu	 D. Menu	 4 DVD	 4
 Up	 Up	 5 DVD	 5
 Down	 Down	 6 DVD	 6





	Original	Rechange		Original	Rechange
	7 DVD		7		
	8 DVD		8		
	9 DVD		9		
	0 DVD		0		
	>10/-/- DVD		Guide		
	Vol+		Vol +		
	Vol-		Vol -		
	Muting		Mute		

	Original	Rechange		Original	Rechange

 



 






 


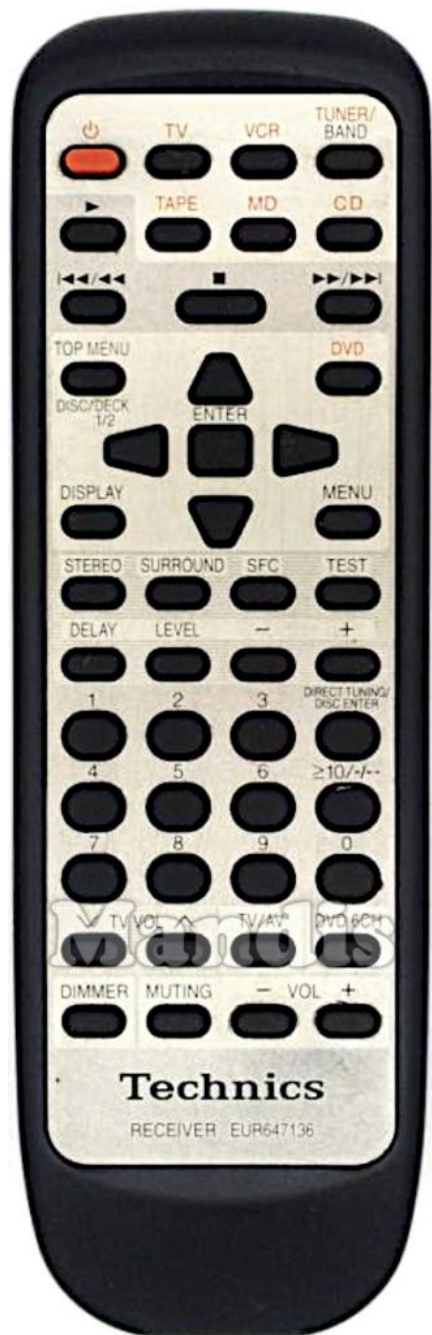




 















 


Original	Rechange
 Power CD	 Power
 TV	 TV/R
 VCR	 Smart
 CD	 Yellow
 DVD	 Blue
 Tape	 Red
 MD	 Media
 Tuner/Band	 Green
 Stop CD	 Stop
 I<</<< CD	 <<
 >>/>>I CD	 >>
 Play CD	 Play
 Menu	 D. Menu
 Display	 Info
 Top Menu/Disc/Deck	 Menu
 Up	 Up
 Down	 Down

Original	Rechange
 Right	 Right
 Left	 Left
 Enter	 Ok
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Power Tape	 Shift + Power
 Stop Tape	 Shift + Stop
 Play Tape	 Shift + Play










 





 


 
 


 



 




 




 



 

 


 
 
 
























Original	Rechange
 I<</<< Tape	 +  Shift + <<
 >>/>>I Tape	 +  Shift + >>
 Top Menu/Disc/Deck	 +  Shift + Menu
 1 CD-Tape	 1
 2 CD-Tape	 2
 3 CD-Tape	 3
 4 CD-Tape	 4
 5 CD-Tape	 5
 6 CD-Tape	 6
 7 CD-Tape	 7
 8 CD-Tape	 8
 9 CD-Tape	 9
 0 CD-Tape	 0
 >10/-/- CD-Tape	 GUIDE
 Direct Tuning/Disc Enter	 REPEAT TEXT

Original	Rechange

 





 
 
 

 
 
 

 

 

 

 


 
 
 

 




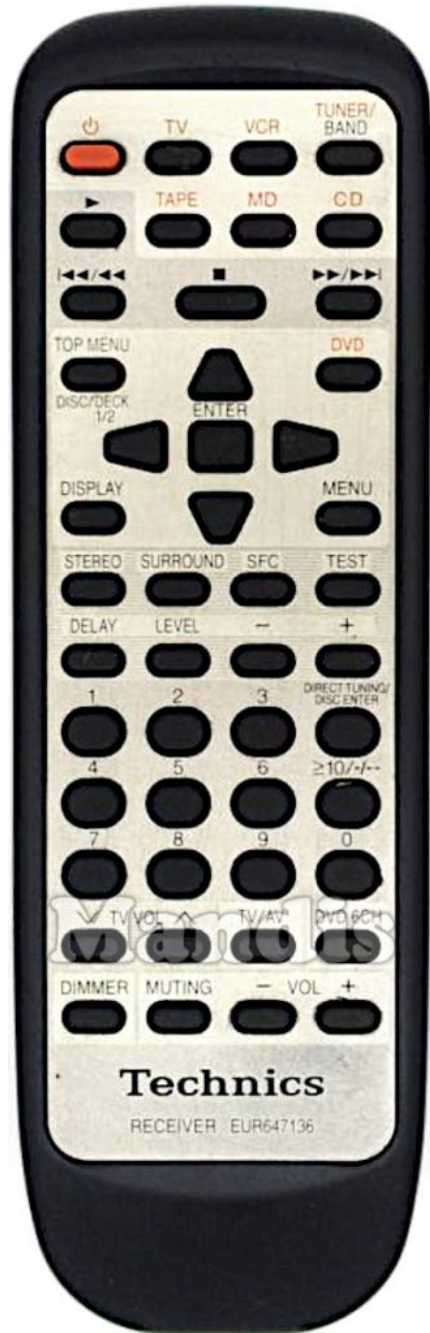 



 

 

 



 

 



 

 

 


Original		Recharge		Original		Recharge	
	Power VCR		Power		5 VCR		5
	Dimmer		Pre Ch		6 VCR		6
	VCR		Smart		7 VCR		7
	Tape		Red		8 VCR		8
	TV		TV/R		9 VCR		9
	CD		Yellow		0 VCR		0
	DVD		Blue		>10/-/- VCR		Guide
	Tuner/Band		Green		Direct Tuning/Disc Enter		Text
	MD		Media		Vol+		Vol +
	Stop		Stop		Vol-		Vol -
	I<</<<		<<		Muting		Mute
	>>/>>I		>>		Up		Up
	Play		Play		Down		Down
	1 VCR		1		Right		Right
	2 VCR		2		Left		Left
	3 VCR		3		Enter		Ok
	4 VCR		4		Top Menu/Disc/Deck		Menu

1/2





Original	Recharge	Original	Recharge
 Display	 Info	 7 Tuner/Band	 Shift + 7
 Menu	 D. Menu	 8 Tuner/Band	 Shift + 8
 Stereo	 Dual	 9 Tuner/Band	 Shift + 9
 Surround	 Options	 0 Tuner/Band	 Shift + 0
 SFC	 Subt	 >10/-/-	 Shift + Guide
 Test	 Back		
 Delay	 Format		
 Level	 3D		
 +	 Ch +		
 -	 Ch -		
 Power Tuner/Band	 Shift + Power		
 1 Tuner/Band	 Shift + 1		
 2 Tuner/Band	 Shift + 2		
 3 Tuner/Band	 Shift + 3		
 4 Tuner/Band	 Shift + 4		
 5 Tuner/Band	 Shift + 5		
 6 Tuner/Band	 Shift + 6		

Original	Recharge
 7 Tuner/Band	 Shift + 7
 8 Tuner/Band	 Shift + 8
 9 Tuner/Band	 Shift + 9
 0 Tuner/Band	 Shift + 0
 >10/-/-	 Shift + Guide

