

















 





 

 
 


Original	Rechange
Standby	Power
Open / Close	Eject / Surround
Play Mode	Picture / Format
Timer	Sleep / Timer
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Title	Sound / Title
Display	Display / Media
Zoom	Zoom / Size
Menu	Menu / Home
Setup	Setup / OPT /
Return	Back / Return
Watch TV	Smart / List
Up	Up
Left	Left
Select	OK
Right	Right

Original	Rechange
Down	Down
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
Stop	Stop / Hold
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Search	<< / Tune-
Search >>	>> / Tune+
Program+	CH+ / Page+
Rec. Mode	SHIFT + Rec / Rec Mode
TV / DVD	TV/Radio /
Program-	CH- / Page-
Record	Rec / Rec Mode
Insert Chapter	D.Menu / Top
Subtitle	Subtitle / EQ
Video Source	AV / Input / RDS
Audio	Audio / Lang I/II





	Original	Rechange	Original	Rechange
	Angle	 Info / Angle		
	Search Mode	 Red / Netflix / Search		
	1	 1		
	2	 2		
	3	 3		
	Clear	 Exit / Cancel / Clear		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		

