


 








 







 





 





 



 





 



 



 






 



 







 





Original		Rechange		Original		Rechange	
	Power		Power		10+		Guide
	Open / Close		Eject		Repeat		Text
	Card / USB		Media		A-B		D. Menu
	Subtitle		Subt		Zoom		Shift + Eject
	Disc		Smart		Setup		Options
	Language		Dual		PBC		TV/R
	DVD / DVBS		AV		Up		Up
	1		1		Left		Left
	2		2		Enter		Ok
	3		3		Right		Right
	4		4		Down		Down
	5		5		Title		List
	6		6		Menu		Menu
	7		7		Pause		Pause
	8		8		Slow		Shift + Play
	9		9		Resume		Shift + Stop
	0		0		<<		<<





Original	Rechange	Original	Rechange
	>>		>>
	Play		Play
	I<<		I<<
	>>I		>>I
	Stop		Stop
	3D		3D
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Step		Shift + Pause
	OSD		Info
	L/R		Pre Ch
	Prog		Sleep
	Clear		Exit
	Goto		Back

