 



 



 

 



 

 



 



 



 

 

 



 



 

 

 



 



 

 
 




 
 





















Original	Recharge	Original	Recharge
 PWR	 Power	 Green	 Green / APP / Repeat
 TV/Rad	 TV/Radio /	 A/V+	 AV / Input / RDS
 TV/STB	 Display / Media	 Yellow / FAV	 Yellow / YouTube / Repeat
 1	 1	 FAV	 Fav / Marker / PC
 2	 2	 Blue / A-Z	 Blue / Prime Video / Random
 3	 3	 Blue / A-Z	 Shift + Blue / Prime
 4	 4	 Menu	 Menu / Home
 5	 5	 EPG	 Guide / EPG / -/-
 6	 6	 Info	 Info / Angle
 7	 7	 Up	 Up
 8	 8	 Left	 Left
 9	 9	 OK	 OK
 Back	 Back / Return	 Right	 Right
 0	 0	 Down	 Down
 Mute	 Mute / Dimmer	 Vol+	 Vol+
 Red	 Red / Netflix / Search	 Exit	 Exit / Cancel / Clear
 OPT	 Setup / OPT /	 PR/CH+	 CH+ / Page+

Original	Recharge	Original	Recharge
 PWR	 DIMMER MUTE	 SHIFT	 TV
 TV/Rad	 DVD	 SAT	 AUX
 TV/STB	 SLOW	 STEP-FREEZE	 HOLD
 1	 PAUSE	 REC MODE	 TUNE-
 2	 PLAY	 PRESET-	 TUNE+
 3	 STOP	 PRESET+	 TUNE-
 4	 LIST	 EQ	 TUNE+
 5	 SLOW	 SURROUND	 TITLE
 6	 REC	 PROGRAM	 LANG VUI
 7	 MARK	 RDS	 EQ
 8	 JUMP	 AV INPUT	 SUBTITLE
 9	 SLEEP	 D.MENU	 TIMER
 BACK	 TOP MENU	 SETUP	 GOTO
 0	 OPT-TOOLS	 TEXT	 RDS
 MUTE	 DIMMER MUTE	 AV INPUT	 HOME
 Red	 NETFLIX SEARCH	 HOME	 ANGLE
 OPT	 OPT-TOOLS SETUP	 MENU	 INFO
 PR/CH+	 CH+ / Page+	 MENU	 RETURN



