



Original	Rechange
Standby	Power
Equalizzatore	Shift + Sound / Title
Surround	Shift + Eject / Surround
Eject	Eject / Surround
Audio	Audio / Lang I/II
1	1
2	2
3	3
Angle	Info / Angle
4	4
5	5
6	6
Sottotitoli	Subtitle / EQ
7	7
8	8
9	9
Ricerca	Red / Netflix / Search

Original	Rechange
Canc	Exit / Cancel / Clear
0/10	0
10+	Guide / EPG / -/-
Titolo	Sound / Title
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Programm	TV/Radio /
Down	Down
Display	Display / Media
PAL/NTSC	D.Menu / Top
Setup	Setup / OPT /
Digest	Shift + D.Menu / Top Menu
Vol+	Vol+
Mute	Mute / Dimmer





	Original	Recharge
	Mark	 Fav / Marker / PC
	Zoom	 Zoom / Size
	Vol-	 Vol-
	A-B	 Yellow / YouTube / Repeat
	Ripeti	 Back / Return
	Slow	 Shift + Play /
	<</F.RWD	 << / Tune-
	F.FWD/>>	 >> / Tune+
	I<< / Skip-	 I<< / Preset-
	>>I / Skip+	 >>I / Preset+
	Stop	 Stop / Hold
	Pause/Step	 Pause / Step / Freeze
	Play	 Play / Slow

Original	Recharge

