






















 





 

 






Original	Rechange
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE
 Recall	 Back
 Audio	 Dual
 P.M.	 Smart

Original	Rechange
 Info	 Info
 Input	 AV
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+ / Enter	 Right
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 Right / Vol+ / Enter	 Vol +
 Right / Vol+ / Enter	 Ok
 Menu	 Menu
 Page+	 >>
 Page-	 <<
 Display	 Shift + Info
 Exit	 Exit
 Red	 Red





Original		Rechange	
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Size		Eject
	Stop		Stop
	Reveal		TV/R
	Index		Options
	4:3 / 16:9		Format
	C.Lock		Media
	Sub.PG		Subt
	On/Mix/Off		Text

Original		Rechange	

