


 

 
 










 







 

 










Original	Recharge
 ON/OFF	 Power
 Freeview Play	 Options
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide
 Picture	 Format
 Sound	 Dual
 Source	 AV
 Vol+	 Vol +

Original	Recharge
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Back	 Back
 FAV	 Pre Ch
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Info	 Info
 Text	 Text
 Subtitle	 Subt
 TV	 TV/R





Original		Recharge		Original		Recharge	
	You Tube		Media				
	Netflix		Smart				
	APPs		Shift + Media				
	Rec/DVD Menu		Rec				
	I<<		I<<				
	>>I		>>I				
	Stop		Stop				
	Rec List/DVD		D. Menu				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause		Pause				
	Red/Goto		Red				
	Green/A-B		Green				
	Yellow/Angle		Yellow				
	Blue/Repeat		Blue				

