
 
 


 




 
 


 
 


 

 
 





 

 

 
 


 




Original	Recharge	Original	Recharge
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Stop	 Stop	Menu Down	 Down
Slow Up	 Ch +	Progr.	 +  Shift + Sleep
Auto/Track	 Red	Volume+	 Vol +
Pause	 Pause	Next	 >>
Subt.	 Subt	Volume-	 Vol -
Rep/A-B	 +  Shift + Text	Top Menu	 +  Shift + Menu
Title	 List	Prev.	 <<
Repeat/1/All	 Text	1	 1
Zoom	 +  Shift + Eject	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Recharge	Original	Recharge
8		8	
9		9	
+10		Guide	
0		0	
Pbc		Green	
C/CH		Pre Ch	
Record		Rec	
Np		Yellow	
Timer		Sleep	
Video		Format	
Rewind		<<	
Digest		Media	
Syst.Preset		D. Menu	
Play		Play	
Mode		Smart	
Random		TV/R	
F.Forward		>>	
Input Source		Shift + AV	
Lang		Shift + Dual	
Setup		Options	
Audio		Dual	
Open/Close		Eject	
3D		3D	

