



Original	Recharge
Power	Power
TV/VCR	TV/Radio /
DVD	Shift + 2
PR+	CH+ / Page+
1	1
2	2
3	3
PR-	CH- / Page-
4	4
5	5
6	6
Vol+	Vol+
7	7
8	8
9	9
Vol-	Vol-
0/AV	0

Original	Recharge
0/AV	AV / Input / RDS
Info	Info / Angle
Setup / Menu	Setup / OPT /
Setup / Menu	Menu / Home
Mute	Mute / Dimmer
Up	Up
Left	Left
Enter/[≡]	OK
Enter/[≡]	Text / Goto
Right	Right
DVD Menu	D.Menu / Top
Down	Down
Cancel/[≡♦]	Exit / Cancel / Clear
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
TRK/Skip-/I<<	I<< / Preset-





Original	Recharge
TRK/Skip-/>>	>>  / Preset+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Rec/Otr	Rec / Rec Mode
Time Rec	Shift + Sleep / Timer
Index/[≡☺]/[≡□]	Smart / List
II>	Shift + Pause / Step / Step
Repeat	Yellow / YouTube / Repeat
Repeat	Shift + TV/Radio / Program
Jump/[≡+]/SP/LP	Picture / Format
Angle/00:00:00	Shift + Info / Angle
Subtitle/Zero	Subtitle / EQ
Zoom/[≡?]	Zoom / Size
Title/ATR	Sound / Title
Return	Back / Return
Play Mode/P→P	Display / Media
Timer	Sleep / Timer

Original	Recharge
Audio	Audio / Lang I/II
Eject	Shift + Eject / Surround
Open/Close	Eject / Surround

