








 




 
 

 





 



 



 



 





 







 

 

 


















Original		Rechange		Original		Rechange	
	Power		Power		3		3
	Mute		Mute		4		4
	Play		Play		5		5
	[≡]		Text		6		6
	Pause/[/≡]		Pause		7		7
	Stop/[≡+]		Stop		8		8
	Rec/[≡◇]		Rec		9		9
	<</[≡o]		<<		0		0
	<</[≡i]		<<		Menu		Menu
	>> /[≡?]		>>		Exit		Exit
	>>/[≡x]		>>		Up		Up
	Info		Info		Left		Left
	EPG		Guide		OK		Ok
	Subtitle		Subt		Right		Right
	Audio		Dual		Down		Down
	1		1		Back		Back
	2		2		Home/Source		Smart





Original		Rechange		Original		Rechange	
	Home/Source		AV				
	Vol+		Vol +				
	Vol-		Vol -				
	List		List				
	P+		Ch +				
	P-		Ch -				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Zoom		Eject				
	Rec.List		TV/R				
	FAV		Pre Ch				

