

















 



Original	Rechange	Original	Rechange
	Power		Power
	SD/USB- PVR		Smart / List
	Time		Sleep / Timer
	Mute		Mute / Dimmer
	Vol+		Vol+
	Source		AV / Input / RDS
	Ch+		CH+ / Page+
	Vol-		Vol-
	Mode		Picture / Format
	Ch-		CH- / Page-
	Tv/Radio		TV/Radio /
	Eject		Eject / Surround
	Audio		Audio / Lang I/II
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	L/R		Display / Media
	Stop		Stop / Hold
	Subtitle / PC Auto		Subtitle / EQ
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	<<		<< / Tune-
	Left		Left
	Ok		OK
	Right		Right
	Fav		Fav / Marker / PC
	>>I		>>I / Preset+
	Down		Down
	>>		>> / Tune+
	Epg		Guide / EPG / -/-
	I<<		I<< / Preset-
	TTX/MIX		Text / Goto
	Info/Display		Info / Angle
	Red/Dvd Menu		Red / Netflix / Search





Original	Rechange
 Red/Dvd Menu	 D.Menu / Top
 Green/Lang	 Green / APP / Repeat
 Green/Lang	 Shift + Audio / Lang I/II
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Yellow/Repeat	 Shift + Green / APP / Repeat
 Blue/Dvd Setup	 Blue / Prime Video / Random
 Blue/Dvd Setup	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Return	 Back / Return
 0	 0
 Return	 Back / Return
 1	
 2	
 3	
 4	
 5	
 6	
 7	
 8	
 9	
 Shift + Guide / EPG / -/--	

Original	Rechange
 0	 0
 Return	 Back / Return
 0	 0
 Return	 Back / Return
 1	
 2	
 3	
 4	
 5	
 6	
 7	
 8	
 9	
 Shift + Guide / EPG / -/--	

