




 
 


 

 

 







 




 











	Original	Rechange
	Operate	 Power
	Sleep	 Sleep
	Function	 Menu
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0/10	 0
	>10	 Guide
	Mode	 Format
	Vol+	 Vol +
	Vol-	 Vol -

	Original	Rechange
	Band	 TV/R
	Tune+	 >>
	Tune-	 <<
	Play	 Play
	Pause	 Pause
	Stop	 Stop
	I<<	 I<<
	>>I	 >>I
	Mega Xpand	 Options
	Mega Bass	 Subt

