



Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol +
	Source		AV		Vol-		Vol -
	HDMI		Media		P+		Ch +
	1		1		P-		Ch -
	2		2		Home		Smart
	3		3		Menu		Menu
	4		4		Guide		Guide
	5		5		Tools		Options
	6		6		Info		Info
	7		7		Return		Back
	8		8		Exit		Exit
	9		9		Up		Up
	0		0		Down		Down
	TTX/MIX		Text		Right		Right
	PRE-CH		Pre Ch		Left		Left
	Mute		Mute		Red		Red
	CH List		List		Green		Green





Original	Recharge	Original	Recharge
 Yellow	 Yellow		
 Blue	 Blue		
 Dual I-II	 Dual		
 Content	 D. Menu		
 3D	 3D		
 Alarm	 TV/R		
 P.Size	 Format		
 Subt.	 Subt		
 Enter	 Ok		
 <</ <<	 <<		
 Pause	 Pause		
 >>/>>	 >>		
 Play	 Play		
 Rec	 Rec		
 Stop	 Stop		

