



 



 

 


 





 

 









 





 

















	Original	Rechange	Original	Rechange
	Power			Left
	Speakers A			Right
	Speakers B			Pause
	Video 1			Stop
	Video 2			Play
	Video 3			Blue
	Disc			I<<
	CD			>>I
	Tuner AM			List
	Tuner FM			Dual
	AUX			Sleep
	Tape 1			TV/R
	Tape 2			Ch -
	Master Vol +			Ch +
	Master Vol -			Subt
	Mute			Options
	Tuner Bank			Format



