




 





 


 

 
 




 



 

 
 




Original		Rechange		Original		Rechange	
	Power		Power		Down		Down
	Source		AV		OK		Ok
	1		1		Right		Right
	2		2		Left		Left
	3		3		Option		Options
	4		4		Return		Back
	5		5		Info		Info
	6		6		Mute		Mute
	7		7		P+		Ch +
	8		8		P-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Eco		3D		Text		Text
	Guide		Guide		Subtitle		Subt
	Menu		Menu		List		List
	Exit		Exit		TV		TV/R
	Up		Up		O)/Lang		Dual



