









 




Original		Rechange		Original		Rechange	
	Power		Power		FAV		Shift + Pre Ch
	<<[]>>		<<		VCR/DBS		Media
	Mute		Mute		Page+		>>
	1		1		Page+		Shift + Ch +
	2		2		Page-		<<
	3		3		Page-		Shift + Ch -
	4		4		Edit		Options
	5		5		Guide		Guide
	6		6		SAT		AV
	7		7		Info		Info
	8		8		Red / Pause		Red
	9		9		Red / Pause		Pause
	0		0		Green / Zoom		Green
	0		0		Green / Zoom		3D
	Find		Shift + TV/R		Yellow / T/Text		Yellow
	Recall		Pre Ch		Yellow / T/Text		Text
	TV/DBS		Smart		Yellow / T/Text		Text
	TV/Radio		TV/R		Blue / Timer		Blue





Original	Recharge	Original	Recharge
 Blue / Timer	 Shift + AV	 PIP	 Format
 Up / CH+	 Up	 Multifeed	 Sleep
 Up / CH+	 Ch +	 [[+]]	 Play
 Down / CH-	 Down	 <<[]>>	 >>
 Down / CH-	 Ch -	 F1	 Shift + 1
 Right / Vol+	 Right	 F2	 Shift + 2
 Right / Vol+	 Vol +	 F3	 Shift + 3
 Left / Vol-	 Left		
 Left / Vol-	 Vol -		
 OK / List	 Ok		
 OK / List	 List		
 Menu / Back	 Menu		
 Menu / Back	 Back		
 Exit	 Exit		
 Subtitle	 Subt		
 Audio	 Dual		
 Signal	 D. Menu		

