











 




 
 




 



 
 
 
 




 
 



 


 
 


 

 

 


 


 
 






 

 
 
 







 

 


Original	Recharge	Original	Recharge
 Power On	 Power	 Stop	 Stop
 Standby	 Shift + Power	 </Pause	 Pause
 Input	 AV	 >> /Preset+	 >>
 Mute	 Mute	 <</Preset-	 <<
 Vol Up	 Shift + Right	 >>/Tune+	 >>
 Vol Down	 Shift + Left	 <</Tune-	 <<
 Volume+	 Vol +	 Setup/Home	 Media
 Volume-	 Vol -	 Test/Disc Menu	 Menu
 T/CH Level	 Smart	 Dimmer/Return	 Back
 CH/Album Up	 Ch +	 Display	 Info
 CH/Album Down	 Ch -	 RDM/Room2	 Exit
 Up	 Up	 Audio	 Options
 Down/Search	 Down	 Surround/Play List >	 Green
 Sel >	 Right	 < Surround/Play List	 Red
 < Sel	 Left	 Stereo/Play M	 TV/R
 Enter	 Ok	 1 / Tuner	 1
 Play	 Play	 2 / CD	 2










 
 










 


 


 




 



 

 




 






	Original	Recharge		
	3 / F.Aux		3	
	4 / Tape		4	
	5 / BT In		5	
	6 / Video 1		6	
	7 / Video 2		7	
	8 / Video 3		8	
	9		9	
	0		0	
	10		GUIDE	Guide
	Ext In		D	Blue
	Sleep		SLEEP	Sleep
	AVR		SHIFT + 1	Shift + 1
	Dock		SHIFT + 2	Shift + 2
	CD		SHIFT + 3	Shift + 3
	AUX		SHIFT + 4	Shift + 4
	BD		SHIFT + 5	Shift + 5
	TV		SHIFT + 6	Shift + 6

	Original	Recharge		
	SAT		SHIFT + 7	Shift + 7
	CBL		SHIFT + 8	Shift + 8









 








 









 

 
 





	Original	Recharge		Original	Recharge
	Power On		Power		Audio
	Standby		Shift + Power		Subtitle
	Up		Up		1
	Down		Down		2
	Right		Right		3
	Left		Left		4
	Enter		Ok		5
	Setup/Home		Media		6
	Test/Disc Menu		Menu		7
	Play		Play		8
	Stop		Stop		9
	>>		>>		0
	<<		<<		
	I<<		I<<		
	>>I		>>I		
	Display		Info		
	Dimmer/Return		Back		




 


 

 




	Original	Recharge	Original	Recharge
	CD			Power
	Play			Play
	Stop			Stop
	Pause			Pause
	I<<			I<<
	>>I			>>I
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0





Original	Recharge
 Power On	 Power
 Standby	 Shift + Power
 RDM/Room2	 Exit
 CH/Album Up	 Ch +
 CH/Album Down	 Ch -
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 >>	 >>
 <<	 <<
 I<<	 I<<
 >>I	 >>I
 Test/Disc Menu	 Menu
 Display	 Info
 Enter	 Ok
 Up	 Up
 Down	 Down

Original	Recharge
 Audio	 Options
 < Surround/Play List	 Red
 Surround/Play List >	 Green
 Stereo/Play M	 TV/R
 Sleep / Dock M.	 Sleep

