



 


 





 
 





 










| Original | | Rechange | | Original | | Rechange | |
|---|-------------|---|-----------------------|---|---------------|---|-----------------------|
|  | Power |  | Power |  | Tools |  | Setup / OPT / |
|  | Mute |  | Mute / Dimmer |  | vTuner |  | Text / Goto |
|  | Play |  | Play / Slow |  | Menu |  | Menu / Home |
|  | Pause |  | Pause / Step / Freeze |  | Up |  | Up |
|  | Stop |  | Stop / Hold |  | Info |  | Info / Angle |
|  | << |  | << / Tune- |  | Left |  | Left |
|  | >> |  | >> / Tune+ |  | Enter |  | OK |
|  | I<< |  | I<< / Preset- |  | Right |  | Right |
|  | >>I |  | >>I / Preset+ |  | Exit |  | Exit / Cancel / Clear |
|  | 3D Sound |  | Sound / Title |  | Down |  | Down |
|  | Dolby PL II |  | Audio / Lang I/II |  | Return |  | Back / Return |
|  | S/W Level |  | Subtitle / EQ |  | Vol + |  | Vol+ |
|  | Eject |  | Eject / Surround |  | Smart Hub |  | Smart / List |
|  | Full Screen |  | Zoom / Size |  | Tuning / CH + |  | CH+ / Page+ |
|  | Sleep |  | Sleep / Timer |  | Vol - |  | Vol- |
|  | Function |  | TV/Radio / |  | DSP |  | Display / Media |
|  | Disc Menu |  | D.Menu / Top |  | Tuning / CH - |  | CH- / Page- |





| Original | | Rechange | | Original | | Rechange | |
|---|-----------|---|------------------|---|--------|---|-----------------------|
|  | Power |  | Power |  | Stop |  | Stop / Hold |
|  | TV Source |  | AV / Input / RDS |  | Play |  | Play / Slow |
|  | Sleep |  | Sleep / Timer |  | Pause |  | Pause / Step / Freeze |
|  | 1 |  | 1 |  | Vol+ |  | Vol+ |
|  | 2 |  | 2 |  | Mute |  | Mute / Dimmer |
|  | 3 |  | 3 |  | CH+ |  | CH+ / Page+ |
|  | 4 |  | 4 |  | Vol- |  | Vol- |
|  | 5 |  | 5 |  | CH- |  | CH- / Page- |
|  | 6 |  | 6 |  | Menu |  | Menu / Home |
|  | 7 |  | 7 |  | Tools |  | Setup / OPT / |
|  | 8 |  | 8 |  | Up |  | Up |
|  | 9 |  | 9 |  | Info |  | Info / Angle |
|  | 0 |  | 0 |  | Left |  | Left |
|  | I<< |  | I<< / Preset- |  | Enter |  | OK |
|  | >>I |  | >>I / Preset+ |  | Right |  | Right |
|  | << |  | << / Tune- |  | Return |  | Back / Return |
|  | >> |  | >> / Tune+ |  | Down |  | Down |



