


 


 

 

 

 



 

 
 
















 

 
 

 
 

 


 

 


 
 
 



 




 
 



 
 



Original	Rechange
 Power	 Power
 Menu	 Menu
 Top Menu	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Enter	 Pre Ch
 F1	 Smart
 F2	 Media

Original	Rechange
 [::=]	 Guide
 Display	 Info
 Tools/Options	 Options
 Return/Exit	 Back
 Menu/Home	 TV/R
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 I<<	 I<<
 >>I	 >>I
 Play	 Play
 Pause	 Pause



 
 
 












 

 
 
 

 


 
 
 
 
 
 

 
 
 


 
 

 

 

 



 

 

 


 
 

 
 


 








Original	Rechange	Original	Rechange
	Power		Power
	Menu		Menu
	Top Menu		D. Menu
	F1		Smart
	F2		Media
	[:=]		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Pre Ch
	Clear		Exit
	Display		Info
	Tools/Options		Options
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Return/Exit		Back
	Menu/Home		TV/R
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>





Original		Rechange		Original		Rechange	
	Power		Power		Display		Info
	Source		AV		Mute		Mute
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		Menu/Home		Media
	4		4		Return/Exit		Back
	5		5		Up		Up
	6		6		OK		Ok
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Play		Play
	Clear		Exit		Stop		Stop
	Enter		Pre Ch		Pause		Pause
	Theatre		Smart		>>/Tuning+		>>
	Sound Field		Dual		<</Tuning-		<<
	AMP Menu		Menu		>>I/Preset+		>>I



