


 





 







 
 

 
 
 

 
 
 
 

 

 
 

 

 
 





 

 
 
 
 
 


 
 

 


 

 









Original	Rechange
 Power	 Power
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Pro. List	 List
 Last	 Back
 Info	 Info
 Menu	 Menu
 Up	 Up

Original	Rechange
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 EPG	 Guide
 Text	 Text
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 J/I-II	 Dual
 P+	 Ch +
 P-	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Index	 Smart





Original	Recharge	Original	Recharge
MIX	Mix	SETTINGS OPT	Options
SUBPAGE	Subpage	E-MANUAL D.MENU	D. Menu
SIZE	Size	ZOOM ▲	Eject
HOLD	Hold	■	Stop
REVEAL	Reveal	APP MEDIA	Media
SUBTITLE	Subtitle	AD SUBT	Subt
FAV	FAV	FAV PRE-CH	Pre Ch
TV/RADIO	TV/Radio	SEARCH TV/R	TV/R
ASPECT	Aspect	ECO 3D	3D
PIC	Pic	PICTURE FORMAT	Format
SLEEP	Sleep	PROG SLEEP	Sleep

Original	Recharge	Original	Recharge

