












 



 
























 



































Original		Rechange		Original		Rechange	
	DVD	 + 	Shift + 2		0		0
	Tuner	 + 	Shift + 6		Cancel	 + 	Shift + Exit / Cancel / Clear
	Port	 + 	Shift + 3		I<<		I<< / Preset-
	Aux	 + 	Shift + 7		Step	 + 	Shift + Pause / Step /
	Power		Power		Pause		Pause / Step / Freeze
	Open / Close		Eject / Surround		>>I		>>I / Preset+
	TV / Video		TV/Radio /		<<		<< / Tune-
	1		1		Stop		Stop / Hold
	2		2		Play		Play / Slow
	3		3		>>		>> / Tune+
	4		4		Volume +		Vol+
	5		5		Mute		Mute / Dimmer
	6		6		Tuning + / CH +		CH+ / Page+
	7		7		Volume -		Vol-
	8		8		Tuning - / CH -		CH- / Page-
	9		9		Menu		Menu / Home
	Remain		D.Menu / Top		Return		Back / Return



