



Original	Recharge
Power On	Power
Power Off	Shift + Power
Mute	Mute
Stereo	Shift + Dual
Cable/Sat	Green
TV	Blue
CD	Yellow
Menu	Menu
Harman Volume	Smart
Exit	Exit
Tone Control	Back
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
1	1

Original	Recharge
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit
Direct	Guide
Vol+	Vol +
Vol-	Vol -
CH/Tuner Up	Ch +
CH/Tuner Down	Ch -
Speaker 1	Options
Speaker 2	Dual





Original	Recharge
 Sleep	 Sleep
 Dim	 TV/R
 P.Scan	 Text
 A.Preset	 AV
 MEM	 Format
 RDS	 Subt
 Prev.CH	 Pre Ch
 I<	 I<<
 <<	 <<<
 >>	 >>>
 >I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Phono	 Shift + 1
 FM/AM	 Shift + 2
 USB	 Shift + 3

Original	Recharge
 Bluetooth	 Shift + 4
 vTuner	 Shift + 5
 Network	 Shift + 6
 AUX	 Shift + 7
 Digital	 Shift + 8





Original		Rechange		Original		Rechange	
	Power On		Power		Cable/Sat		Green
	Power Off	+	Shift + Power		CD		Yellow
	Left		Left		TV		Blue
	Right		Right		Mute		Mute
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Vol+ Stereo		Vol +				
	Vol- Stereo		Vol -				
	Stereo		Dual				


 
 




Original		Rechange		Original		Rechange	
	Power On		Power		2		2
	Power Off		Shift + Power		3		3
	Mute		Mute		4		4
	Stereo		Shift + Dual		5		5
	Cable/SAT		Green		6		6
	TV		Blue		7		7
	CD		Yellow		8		8
	Menu		Menu		9		9
	Harman Volume		Smart		0		0
	Exit		Exit		Clear		Shift + Exit
	Tone Control		Back		Direct		Guide
	Up		Up		Vol+ Stereo		Vol +
	Down		Down		Vol- Stereo		Vol -
	Right		Right		CH/Tuner Down		Ch +
	Left		Left		CH/Tuner Up		Ch -
	OK		Ok		Speaker 1		Options
	1		1		Speaker 2		Dual





Original		Rechange		Original		Rechange	
	Sleep		Sleep				
	DIM		TV/R				
	P.Scan		Text				
	A.Preset		AV				
	MEM		Format				
	RDS		Subt				
	Prev.CH		Pre Ch				
	I<		I<<				
	<<		<<<				
	>>		>>>				
	>I		>>I				
	Stop		Stop				
	Play		Play				
	Pause		Pause				

