










 

 

 
 
 

 
 
 





 




Original		Rechange		Original		Rechange	
	Power		Power		Remain		Smart
	DVD		Blue		Cancel		Media
	Tuner		Green		I<<		I<<
	USB		Yellow		>>I		>>I
	AUX		Red		<<		<<
	Open/Close		Eject		>>		>>
	Sleep		Sleep		Stop		Stop
	1		1		Play		Play
	2		2		Pause		Pause
	3		3		Step		Options
	4		4		Repeat		Text
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Mute		Mute
	8		8		Tuning Up		Ch +
	9		9		Tuning Down		Ch -
	0		0		Menu		Menu





Original	Recharge	Original	Recharge
 Return	 Back		
 Up / Preset Up	 Up		
 Down / Preset	 Down		
 Right / Seek Up	 Right		
 Left / Seek Down	 Left		
 Enter	 Ok		
 Audio	 List		
 Subtitle	 Subt		
 Info	 Info		
 Exit	 Exit		
 Virtual Sound	 Dual		
 EQ	 3D		
 Zoom/Mo/ST	 Shift + Eject		
 Angle/Autoscan	 Guide		

