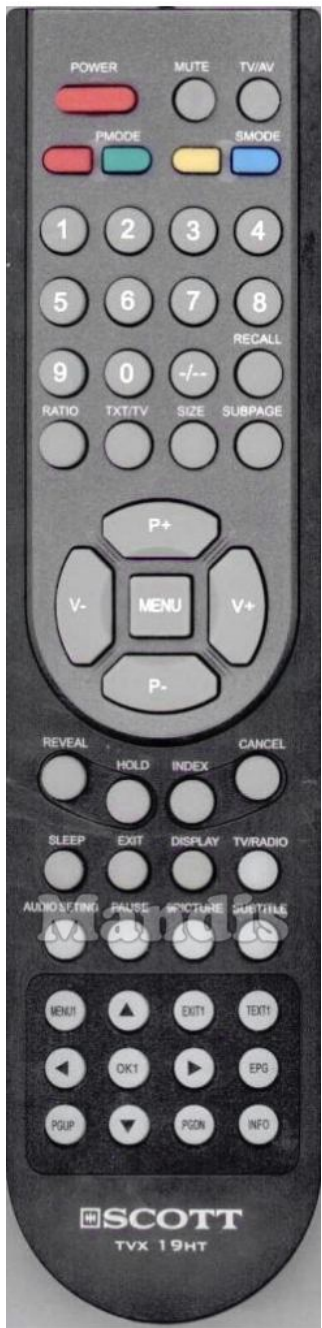 
 

 


Original		Recharge		Original		Recharge	
	Power		Power		-/--		Shift + Guide
	Mute		Mute		Recall		Back
	TV/AV		AV		Ratio		Format
	Red		Red		Size		Eject
	Green/P.Mode		Green		Subpage		Shift + Subt
	Yellow		Yellow		Menu		Menu
	Blue/S.Mode		Blue		P+		Ch +
	1		1		P-		Ch -
	2		2		Vol+		Vol +
	3		3		Vol-		Vol -
	4		4		Sleep		Sleep
	5		5		Exit		Exit
	6		6		Display		Shift + Info
	7		7		Tv/Radio		TV/R
	8		8		Subtitle		Subt
	9		9		Pause		Pause
	0		0		Up		Up





Original		Recharge	
	OK1		Ok
	Down		Down
	Right		Right
	Left		Left
	Menu1	 + 	Shift + Menu
	Exit1	 + 	Shift + Exit
	TXT/TV		Text
	Text1	 + 	Shift + Text
	Info		Info
	EPG		Guide
	PgUp		>>
	PgDn		<<
	Picture	 + 	Shift + Format
	Audio Seting		Dual
	Reveal		Smart
	Index		3D
	Hold		Options

Original		Recharge	
	Cancel	 + 	Shift + Back

