



Original		Recharge		Original		Recharge	
	Power		Power		5		5
	[+]		Display / Media		6		6
	Mute		Mute / Dimmer		7		7
	Tv/AV		AV / Input / RDS		8		8
	Up		Up		9		9
	Down		Down		-/--		Guide / EPG / -/--
	Right		Right		0/VCR		0
	Left		Left		0/VCR		Shift + 4
	Vol+		Vol+		Red		Red / Netflix / Search
	Vol-		Vol-		C		Exit / Cancel / Clear
	Timer		Sleep / Timer		Green		Green / APP / Repeat
	1		1		Blue		Blue / Prime Video / Random
	N		D.Menu / Top		Hold		Shift + Stop /
	F		Menu / Home		Yellow		Yellow / YouTube / Repeat
	2		2		Index		Info / Angle
	3		3		Pause/Step		Pause / Step / Freeze
	4		4		Reveal		Smart / List



