



	Original	Rechange	Original	Rechange
	TV Mute	Mute / Dimmer		TV Vol+ / Vol+
	Output Select	Smart / List		TV Vol- / Vol-
	Tv/Video	AV / Input / RDS		PR/CH/ Input / CH+ / Page+
	Standby/On	Power		PR/CH/ Input / CH- / Page-
	DV	Text / Goto		Exit / Cancel / Clear
	HDD	Shift + 7		Eject / Surround
	DVD	Shift + 2		Yellow / YouTube / Repeat
	1	1		Blue / Prime Video / Random
	2	2		Sleep / Timer
	3	3		TV/Radio /
	4	4		D.Menu / Top
	5	5		Up
	6	6		Down
	7	7		Right
	8	8		Left
	9	9		OK
	0	0		Green / APP / Repeat



