 






 
 

 
 


 
 
 


 

 

 

 





 

 

 
 

 
 



 
 

 






 










 















Original		Rechange		Original		Rechange	
	Power		Power		C		Pre Ch
	Mute		Mute		[*]		TV/R
	[]		Smart		[↔*]		Subt
	[≡]		Text		[↑*]		List
	Input		AV		[↑]		Options
	Output		Media		Red		Red
	1		1		Green		Green
	2		2		Yellow		Yellow
	3		3		Blue		Blue
	4		4		[≡+]		3D
	5		5		[+]		Info
	6		6		SAT		Back
	7		7		Prog+		Ch +
	8		8		Prog-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	-/--		Guide		Picture		Format





	Original	Recharge	Original	Recharge
	Power			
	Prog+			
	Prog-			
	>>			
	Play			
	<<			
	Stop			
	Pause			
	Rec	