









































Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 i	 Info
 EPG	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu

Original	Rechange
 [=]	 Text
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Exit	 Exit
 OPT	 Options
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 MSG	 Format
 Tv/STB	 Media
 Nothing	 Smart





Original		Recharge		Original		Recharge	
	TV/R		TV/R				

