




 
 


 

 

 

 
 
 

 



 



 

 



 



 
 






 




 



 
 



 




 







Original		Rechange		Original		Rechange	
	Power		Power		CH-		Ch -
	1		1		Source		AV
	2		2		Home		Smart
	3		3		Micro		List
	4		4		Back		Back
	5		5		*		Menu
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0/Quick Acces		0		OK		Ok
	List/Guide		Guide		Wheel Up		>>I
	.../AD/SAP		Subt		Wheel Down		I<<
	Vol+		Vol +		Red		Red
	Vol-		Vol -		Green		Green
	Mute		Mute		Yellow		Yellow
	CH+		Ch +		Blue		Blue





Original	Recharge
Netflix	Media
prime video	E-MANUAL D.MENU
Disney +	PICTURE FORMAT
Rakuten TV	ECO 3D
Smart Colors	SHIFT +  HOME SMART
O	SETTINGS OPT

Original	Recharge

