












 








 


 

 

 








 




 
 










 


 


 






 






 




Original		Rechange		Original		Rechange	
	Power		Power		Next		>>I
	Open / Close		Eject		Mute		Mute
	Subtitle		Subt		Return		Back
	Top Menu		D. Menu		Dimmer		Shift + Mute
	Audio		Dual		P-Scan		Smart
	Angle		3D		Up		Up
	Menu		Menu		Left		Left
	A-B		Shift + Text		Enter		Ok
	Search		TV/R		Right		Right
	Repeat		Text		Down		Down
	[M] ↔ [ ]		Media		Display		Info
	Play		Play		Setup		Options
	Stop		Stop		1		1
	Pause / Step		Pause		2		2
	Rew.		<<		3		3
	F.F.		>>		4		4
	Previous		I<<		5		5





Original		Rechange		Original		Rechange	
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Slow		Format				
	Zoom	 + 	Shift + Eject				
	A		Red				
	B		Green				
	C		Yellow				
	D		Blue				

