





 

 

 



















 







Original	Rechange
	 Power
	 TV/Radio /
	 D.Menu / Top
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Info / Angle
	 Guide / EPG / -/--
	 Vol+
	 Vol-

Original	Rechange
	 Mute / Dimmer
	 CH+ / Page+
	 CH- / Page-
	 Menu / Home
	 Exit / Cancel / Clear
	 Up
	 Down
	 Right
	 Left
	 OK
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Text / Goto
	 Stop / Hold
	 Play / Slow





	Original	Recharge		Original	Recharge
	Pause	 Pause / Step / Freeze			
	Rec	 Rec / Rec Mode			
	I<<	 I<< / Preset-			
	<<	 << / Tune-			
	>>	 >> / Tune+			
	>>I	 >>I / Preset+			

