



Original	Rechange
Standby	Power
Open/Close	Eject / Surround
Up	Up
Down	Down
Right	Right
Left	Left
Set Up	Setup / OPT /
Return	Back / Return
Menu	Menu / Home
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Red	Red / Netflix / Search
Blue	Blue / Prime Video / Random
Play	Play / Slow
Pause/Step	Pause / Step / Freeze
Stop	Stop / Hold
I<<	I<< / Preset-

Original	Rechange
>>	>> / Preset+
<<	<< / Tune-
>>	>> / Tune+
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
10+	Guide / EPG / -/-
Audio	Audio / Lang I/II
Title	Sound / Title
Clear	Exit / Cancel / Clear





	Original	Recharge	
REPEAT	Repeat	 +  <small>Shift + Green / APP /</small>	
PROG	Prog		
ZOOM	Zoom		
V.REMOTE	V-Remote		
INTRO	Intro		
EQ	EQ	 +  <small>Shift + Subtitle / EQ</small>	
KARAOKE	Karaoke		
MARK	Mark		
SEARCH	Search	 +  <small>Shift + Red / Netflix /</small>	
DISPLAY	Display		
IS/PS	IS/PS		
SUBTITLE	Subtitle		
VOL +	Vol+		
VOL -	Vol-		

Original	Recharge

