

 



 







 



 

 

 
 
 
 

 


 
 





 





 

 

 


 
 
 



 



 
 
 







Original	Recharge
 Power	 Power
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cancel	 Shift + Exit / Cancel / Clear
 Audio	 Audio / Lang I/II
 Receiver Vol+	 Vol+
 Receiver Vol-	 Vol-
 Receiver Mute	 Mute / Dimmer

Original	Recharge
 Vieta Cast	 Smart / List
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 << Slow/Search	 << / Tune-
 Slow/Search >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Status	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Option	 Shift + Setup / OPT / Tools
 Return	 Back / Return
 Top Menu/Direct Navigator	 D.Menu / Top
 Pop-Up Menu	 Shift + Menu /
 Function Menu	 Menu / Home
 Up	 Up
 Down	 Down





Original	Recharge
 Right	 Right
 Left	 Left
 OK	 OK
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Setup	 Setup / OPT /
 PIP	 Picture / Format
 Display	 Display / Media
 Select Drive	 AV / Input / RDS
 Power Tv	 Shift + Power
 AV Tv	 Shift + AV / Input / RDS
 TV Vol+	 Shift + Vol+
 TV Vol-	 Shift + Vol-
 TV CH+	 CH+ / Page+
 TV CH-	 CH- / Page-

Original	Recharge

