



Original	Recharge
Power Audio	Power
Tv Direct	Shift + 0
Power DVR/DVD	Red / Netflix / Search
Power VCR	Green / APP / Repeat
Power STB	Yellow / YouTube / Repeat
Power Tv	Blue / Prime Video / Random
DVR/DVD	Fav / Marker / PC
VCR	Shift + 4
Video	Shift + 5
TV	Shift + 1
DVD Multi	Guide / EPG / -/--
FM/AM	Shift + 6
Tv/Video	TV/Radio /
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
Channel+	Shift + Audio / Lang I/II

Original	Recharge
Channel-	Shift + Setup / OPT / Tools
Tv Vol+	Shift + Vol+
Tv Vol-	Shift + Vol-
I<</Tuning-	I<< / Preset-
Play/FM Mode	Play / Slow
>>I/Tuning+	>>I / Preset+
<<	<< / Tune-
Stop/Memory	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Menu	Menu / Home
Top Menu/STB	D.Menu / Top
Smart Surround Setup	Sound / Title
On	Picture / Format
Up/TA/News/Inf	Up
Down/PTY	Down
Right/PTY+	Right





Original	Rechange
Left/PTY-	Left
Enter	OK
fsIRate/Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
SetUp	Setup / OPT /
DVD/HDD/Title/Gr	Shift + 2
Zoom/→	Zoom / Size
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Rechange
←	Back / Return
VFP/Progressive	Smart / List
Angle	Info / Angle
Ex/Es/Return	Shift + Back / Return
Cancel	Exit / Cancel / Clear
DVD Card/Rec	Rec / Rec Mode
Rec Pause	Shift + Pause / Step /
Surround	Eject / Surround
Display/Dimmer	Display / Media
Input Analog/Digital	AV / Input / RDS
L-Front+/Thumbn	Shift + Up
L-Front-	Shift + Down
Front-R+/Slide	Shift + Right
Front-R-	Shift + Left
Center+/3D/S	CH+ / Page+
Center-	CH- / Page-
Page+/Subwfr+	Shift + CH+ / Page+

Page+









 





















 
 




Original	Rechange	Original	Rechange
Power DVD	Power	Right	Right
Power Audio	Shift + Power	Left	Left
Muting	Mute / Dimmer	Enter	OK
Vol+	Vol+	fs/Rate/Audio	Audio / Lang I/II
Vol-	Vol-	Subtitle	Subtitle / EQ
I<<	I<< / Preset-	Set Up	Setup / OPT /
Play	Play / Slow	DVD/HDD/Title/Gr	Blue / Prime Video / Random
>>I	>>I / Preset+	Zoom/→	Zoom / Size
<<	<< / Tune-	←	Back / Return
Stop	Stop / Hold	VFP/Progressive	Smart / List
Pause	Pause / Step / Freeze	Angle	Info / Angle
>>	>> / Tune+	EX/Es/Return	Shift + Back / Return
Menu	Menu / Home	Cancel	Exit / Cancel / Clear
Top Menu/STB	D.Menu / Top	DVD Card/Rec	Rec / Rec Mode
On Screen	Picture / Format	1	1
Up	Up	2	2
Down	Down	3	3





Original		Rechange		Original		Rechange	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	10		Guide / EPG / -/--				
	+10		Fav / Marker / PC				
	Surround		Eject / Surround				
	Display/Dimmer		Display / Media				
	Input Analog/Digital		AV / Input / RDS				
	Thumbnail		Yellow / YouTube / Repeat				
	Slide		Text / Goto				
	3D/S Effect		Sound / Title				
	Page+		CH+ / Page+				





Original	Rechange
 Power Audio	 Power
 FM/AM	 TV/Radio /
 Muting	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 I<</Tuning-	 I<< / Preset-
 Play/FM Mode	 Play / Slow
 >>I/Tuning+	 >>I / Preset+
 Stop/Memory	 Stop / Hold
 Up/TA7News/Inf	 Up
 Down/PTY	 Down
 Right/PTY+	 Right
 Left/PTY-	 Left
 On	 Picture / Format
 Smart Surround Setup	 Smart / List
 1 FM/AM	 1
 2 FM/AM	 2

Original	Rechange
 3 FM/AM	 3
 4 FM/AM	 4
 5 FM/AM	 5
 6 FM/AM	 6
 7 FM/AM	 7
 8 FM/AM	 8
 9 FM/AM	 9
 10 FM/AM	 0
 +10 FM/AM	 Fav / Marker / PC
 EX/ES/Return	 Back / Return
 Display/Dimmer	 Display / Media
 Decode	 Shift + 2
 EQ Freq	 Shift + 3
 Bass Boost	 Shift + 4
 C.Tone	 Shift + 5
 EQ Level+	 Shift + 6
 Midnight	 Shift + 7



